

Connector Part Information		<ul style="list-style-type: none"> • PCM Connector C1 12191489 • 80 Way Micro-Pack 100W Series Sealed (BLU) 	
Pin	Wire Color	Circuit No.	Function
1	BLK	451	PCM Ground
2	LT GRN	1867	12 Volt Reference
3	PNK/BLK	1746	Fuel Injector 3 Control
4	LT GRN/BLK	1745	Fuel Injector 2 Control
5-7	--	--	Not Used
8	GRY	596	5 Volt Reference
9-10	--	--	Not Used
11	LT BLU	1876	KS 2 Signal
12	DK BLU/WHT	1869	CKP Sensor Signal
13-16	--	--	Not Used
17	DK BLU	1225	Transmission Fluid Pressure Switch Signal B
18	RED	1226	Transmission Fluid Pressure Switch Signal C
19	PNK	439	Ignition 1 Voltage
20	ORN	340	Battery Positive Voltage
21	YEL/BLK	1868	Low Reference
22	--	--	Not Used
23	GRY	720	Low Reference
24	--	--	Not Used
25	TAN	1671	HO2S Low Signal Bank 2 Sensor 2
26	TAN	1667	HO2S Low Signal Bank 2 Sensor 1
27	--	--	Not Used
28	TAN/WHT	1669	HO2S Low Signal Bank 1 Sensor 2
29	TAN/WHT	1653	HO2S Low Signal Bank 1 Sensor 1
30-31	--	--	Not Used
32	GRY	48	CPP Switch Signal
33	PPL	420	TCC Brake Switch Signal
34	ORN/BLK	434	Neutral Safety Switch Signal
35	--	--	Not Used
36	BLK	1744	Fuel Injector 1 Control
37	YEL/BLK	846	Fuel Injector 6 Control
38-39	--	--	Not Used
40	BLK	451	Ground
41	--	--	Not Used
42	DK GRN	335	Low Speed Cooling Fan Relay Control

43	RED/BLK	877	Fuel Injector 7 Control
44	LT BLU/BLK	844	Fuel Injector 4 Control
45	GRY	474	5-volt Reference A/C Refrigerant Pressure Sensor
46	GRY	474	5-volt Reference Fuel Tank Pressure Sensor
47	--	--	Not Used
48	GRY	416	5-volt Reference MAP Sensor
49-50	--	--	Not Used
51	DK BLU	496	KS 1 Signal
52	--	--	Not Used
53	BLK	407	Low Reference Transmission Temperature Sensor
54	BLK	407	Low Reference MAP Sensor
55	--	--	Not Used
56	--	--	Not Used
57	ORN	340	Battery Positive Voltage
58	DK GRN	1049	ECM/PCM/VCM Class 2 Serial Data
59	--	--	Not Used
60	BLK	452	Low Reference
61	PNK/BLK	632	Low Reference Camshaft Position Sensor
62-64	--	--	Not Used
65	PPL	1670	HO2S High Signal Bank 2 Sensor 2
66	PPL	1666	HO2S High Signal Bank 2 Sensor 1
67	--	--	Not Used
68	PPL/WHT	1668	HO2S High Signal [Bank 1 Sensor 2
69	PPL/WHT	1665	HO2S High Signal Bank 1 Sensor 1
70	BRN	1174	Oil Level Switch Signal
71-72	--	--	Not Used
73	BRN/WHT	633	CMP Sensor Signal
74	YEL	410	ECT Sensor Signal
75	--	--	Not Used
76	BLK/WHT	845	Fuel Injector 5 Control
77	DK BLU/WHT	878	Fuel Injector 8 Control
78	--	--	Not Used
79	GRY or WHT	587 or 687	Skip Shift Solenoid Control M/T or 3-2 Shift Solenoid Control A/T
80	BLK	407	Low Reference

• PCM Connector C2 12191488

Connector Part Information		• 80 Way Micro-Pack 100W Series Sealed (RED)	
Pin	Wire Color	Circuit No.	Function
1	BLK	451	Ground
2	BRN	418	TCC Solenoid - Output - PWM
3	--	--	Not Used
4	PNK/BLK	429	Air Injection Reaction Solenoid Relay - Coil - Control
5	--	--	Not Used
6	RED/BLK	1228	PC Solenoid Valve High Control Sol.A
7	--	--	Not Used
8	LT BLU/WHT	1229	PC Solenoid Valve Low Control Sol.A
9	DK GRN/WHT	465	Fuel Pump Relay Control Primary
10	WHT	121	Engine Speed Signal
11-12	--	--	Not Used
13	WHT	85	Cruise Control Engage Signal
14	RED/BLK	380	A/C Refrigerant Pressure Sensor Signal
15	RED	225	Generator Turn ON Signal
16	--	--	Not Used
17	DK GRN/WHT	762	A/C Request Signal
18	DK GRN	59	A/C Compressor Clutch Supply Voltage
19	--	--	Not Used
20	LT GRN/BLK	822	VSS Low Signal
21	PPL/WHT	821	VSS High Signal
22-23	--	--	Not Used
24	DK BLU	417	TP Sensor Signal
25	TAN	472	IAT Sensor Signal
26	PPL	2121	IC 1 Control
27	RED	2127	IC 7 Control
28	LT BLU/WHT	2126	IC 6 Control
29	DK GRN/WHT	2124	IC 4 Control
30	DK BLU	229	Fuel Enable Control
31	YEL	492	MAF Sensor Signal
32	LT GRN	432	MAP Sensor Signal
33	DK BLU	473	High Speed Cooling Fan Relay Control
34	DK GRN/WHT	428	EVAP Canister Purge Solenoid Control
35	--	--	Not Used
36	BRN	436	AIR Pump Relay Control
37	DK GRN	83	Cruise Control Inhibit Signal
38	--	--	Not Used

39	RED	631	12 Volt Reference
40	BLK	451	Ground
41	--	--	Not Used
42	TAN/BLK	422	TCC Solenoid Valve Control
43	DK GRN/WHT	459	A/C Clutch Relay Control
44	LT GRN	1652	Reverse Lock Out Solenoid Control
45	WHT	1310	EVAP Canister Vent Solenoid Control
46	BRN/WHT	419	MIL Control
47	YEL/BLK	1223	2 - 3 Shift Solenoid Valve Control
48	LT GRN	1222	1 - 2 Shift Solenoid Valve Control
49	--	--	Not Used
50	DK GRN/WHT	817	VSS Signal
51	YEL/BLK	1227	TFT Sensor Signal
52	--	--	Not Used
53	GRY/BLK	1687	Ignition Retard Signal
54	PPL	1589	Fuel Level Sensor Signal
55-56	--	--	Not Used
57	PPL	719	Low Reference
58-59	--	--	Not Used
60	BRN	2129	Low Reference
61	BRN/WHT	2130	Low Reference
62	--	--	Not Used
63	PNK	1224	Transmission Fluid Pressure Switch Signal A
64	DK GRN	890	Fuel Tank Pressure Sensor Signal
65	--	--	Not Used
66	PPL/WHT	2128	IC 8 Control
67	RED/WHT	2122	IC 2 Control
68	DK GRN	2125	IC 5 Control
69	LT BLU	2123	IC 3 Control
70-75	--	--	Not Used
76	LT GRN/WHT	1749	IAC Coil B High Control
77	LT GRN/BLK	444	IAC Coil B Low Control
78	LT BLU/BLK	1748	IAC Coil A Low Control
79	LT BLU/WHT	1747	IAC Coil A High Control
80	--	--	Not Used

Courtesy of MattH